


Recommended installation method for above ground Distribution Pillars

1. Install Pillar in open trench and level up pillar. Install Earth electrode before backfilling. You may wish to fill with concrete between feet of pillar.
2. Backfill outside of metal skirt. Inside backfill with clean soil or sand. Level with outside ground level.
3. Further fill, inside of skirt to above 50mm depth with a dry / wet mortar mix, in order to exclude rodents, surface water etc.

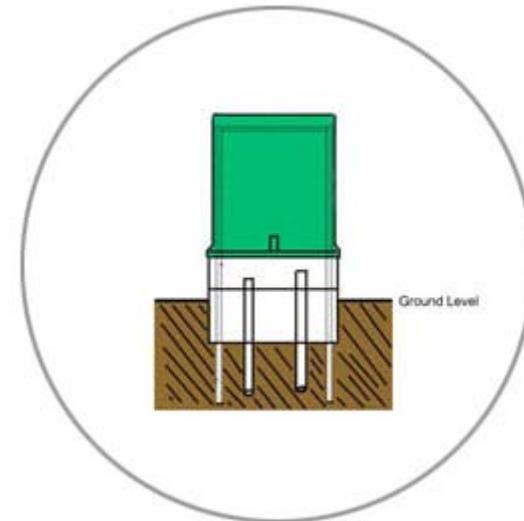

We specialise in making custom made pillars to meet any specific need.
Current Industries is able to organise delivery of products for clients.
Standard items are usually delivered 1-2 working days.
Quoted pillars depend on complexity of design.